
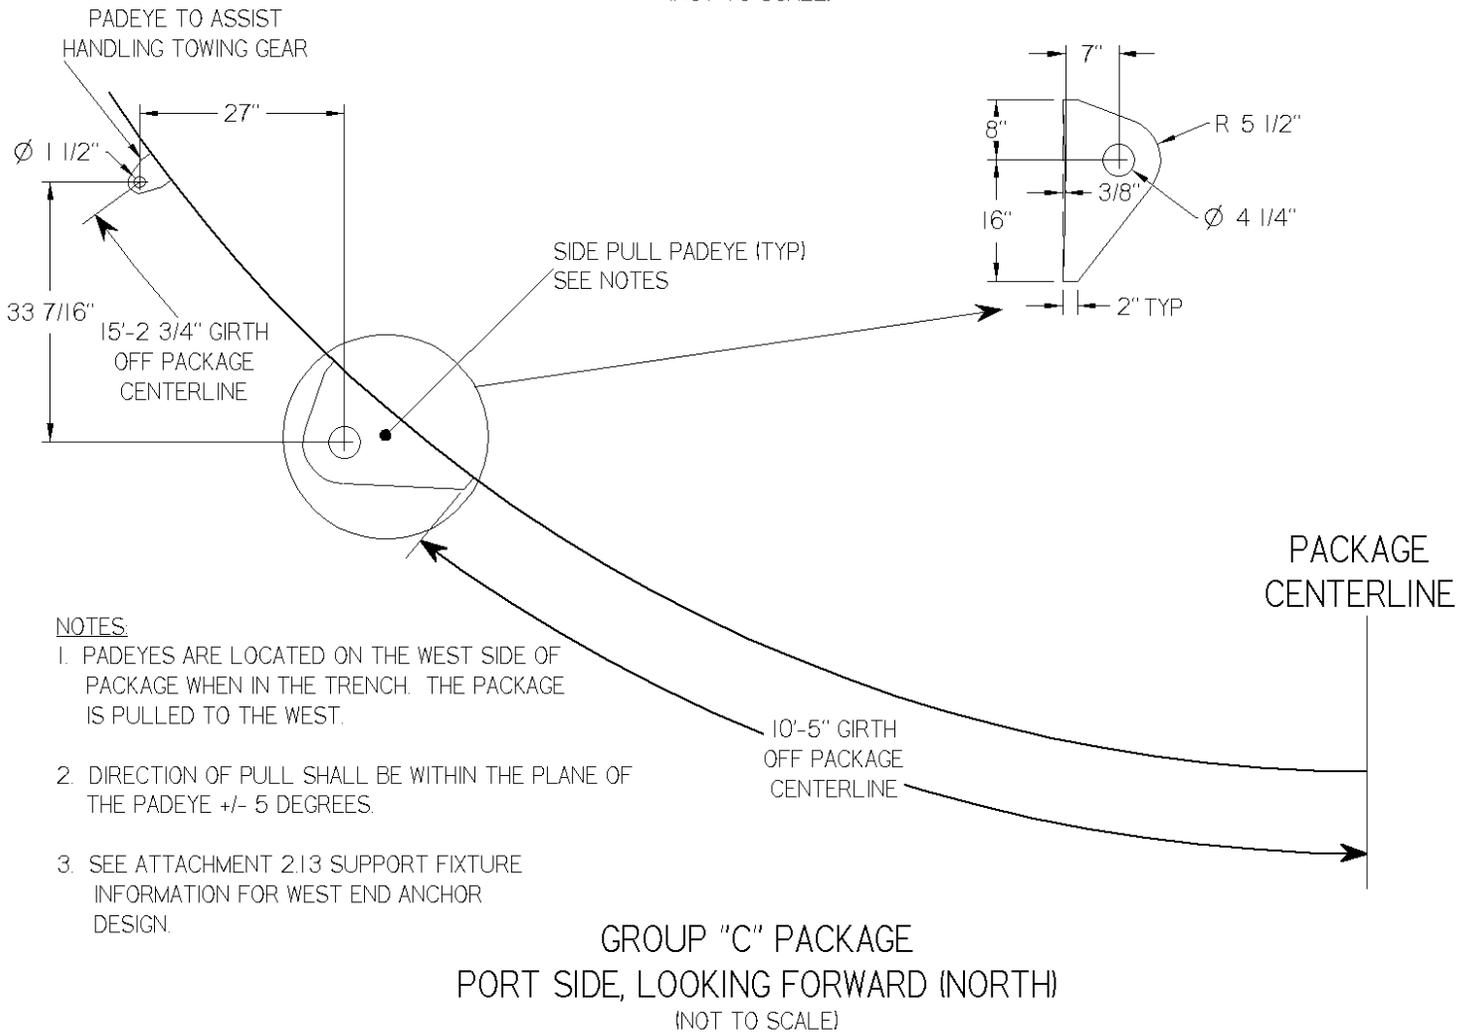


TOW EQUIPMENT ATTACHMENTS

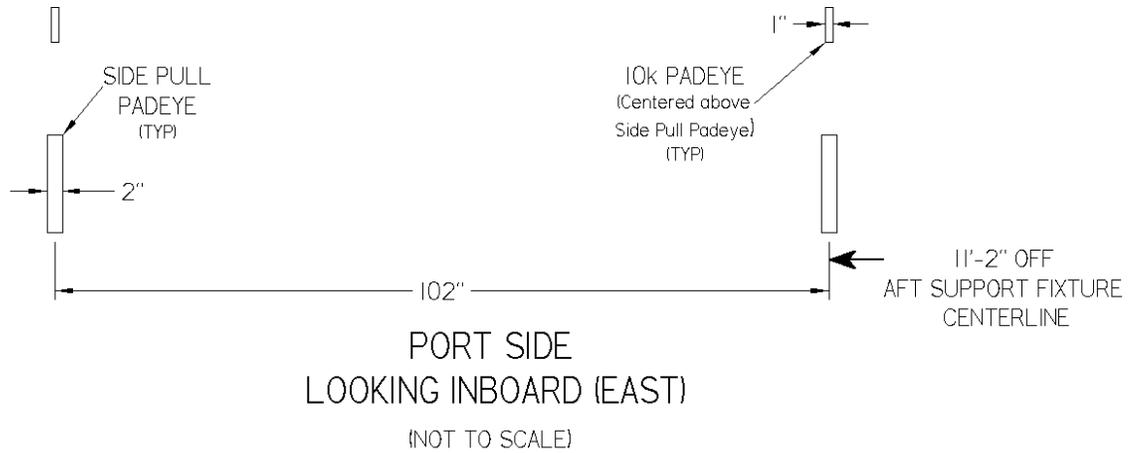

NOTES:

1. PADEYES ARE LOCATED ON THE WEST SIDE OF PACKAGE WHEN IN THE TRENCH. THE PACKAGE IS PULLED TO THE WEST.
2. DIRECTION OF PULL SHALL BE WITHIN THE PLANE OF THE PADEYE +/- 5 DEGREES.
3. SEE ATTACHMENT 2.13 SUPPORT FIXTURE INFORMATION FOR WEST END ANCHOR DESIGN.